



REVERSE OSMOSIS DRINKING WATER SYSTEMS

INSTALLATION, OPERATION & SERVICE MANUAL

220 Bayview Drive, Unit 18
Barrie, ON L4N 4Y8
www.excaliburwater.com

TABLE OF CONTENTS

	Page
INTRODUCTION	1
<u>PREPARATION</u>	
A. Major System Components	2
Installation Drawing	3
B. Tools Recommended for Installation	4
C. Site Selection For Major System Components	4
<u>INSTALLATION STEPS</u>	
A. Faucet Installation	5
Faucet Drawing	6
B. Feed Water Ball Valve Installation	7
C. Drain Clamp Installation	8
D. Position the Drinking Water Holding Tank and Make the Final Hose Connections	9
E. Start Up	9
<u>OPERATION AND MAINTENANCE</u>	
A. Normal Operation	10
B. Changing Filters	10
C. Changing the In-Line Activated Carbon Post Filter	11
<u>TECHNICAL DATA</u>	
A. Water Quality	11
TROUBLESHOOTING GUIDE	12/13
DRAWINGS Filter change	14

CAUTION:

The Centers for Disease Control and Prevention (CDC) and the Environmental Protection Agency (EPA) have issued guidance to people with severely weakened immune systems who may want to take extra precautions to reduce the risk of infection with *Cryptosporidium* from drinking water. This guidance pertains to people with HIV/AIDS, patients receiving treatment for cancer, recipients of organ or bone marrow transplants, transplant patients taking immunosuppressive drugs, and persons who have congenital immunodeficiencies.

The EPA has stated that they do not know the importance of drinking water compared to other possible sources of *Cryptosporidium* to determine how most people become infected. The CDC-EPA guidance suggest that immunosuppressed individuals discuss their risks with their health care provider.

All individuals should take adequate precaution when changing the filter cartridges, including wearing protective gloves, to avoid direct contact with the exhausted cartridges.

*For complete specifications, refer to the Performance Data Sheet.

INTRODUCTION

Your new Reverse Osmosis Drinking Water System uses a combination of filtration technologies to reduce unwanted contaminants in your water supply. The following steps combine to give you the best in clear sparkling drinking water:

MECHANICAL FILTRATION - The Sediment Pre-filter will remove the larger particles such as silt, rust and scale. Its 5 micron (equal to 0.0002 inch) nominal rating helps to give maximum life to the Reverse Osmosis Membrane.

CARBON BLOCK – The Carbon Block Pre-filter contains carbon with a vast network of pores. The tremendous surface area of these pores (typically 800-1200 square meters per gram of carbon) gives the carbon very good adsorptive sites for substances that contribute to tastes and odors. The carbon block in the Pre-filter will remove any chlorine that may be present in the feed water. This pretreatment is necessary for membrane protection.

REVERSE OSMOSIS MEMBRANE – The Reverse Osmosis Membrane is the heart of the filtration system. It is designed to reduce the dissolved mineral content of the water. Minerals picked up in the environment by the water are measured as Total Dissolved Solids (TDS). In the Reverse Osmosis process, dissolved minerals are separated from the incoming water (the Permeate). The excess minerals are rinsed to drain (the Reject Water).

The membrane is a specially constructed, Fully aromatic polyamide film, and is classified as a Thin Film Composite (T.F.C.).

The spiral wound construction of the Reverse Osmosis Membrane provides maximum surface area for water production and is less susceptible to fouling by particulate matter, turbidity and colloidal materials.

IN-LINE ACTIVATED CARBON COCONUT SHELL POST FILTER – The In-Line Activated Carbon Post Filter is located after the Holding Tank and reduces the tastes and odors that may pass through the system. It adds a final polish to the water.

AUTOMATIC SHUTOFF VALVE – The ASO Valve senses when the product water tank is full and closes the feed water supply to prevent excess reject water from going to drain when the unit is not producing water.

BOOSTER PUMP – The in line booster pump will increase the incoming water pressure after the pre sediment and carbon filtration stages to 80psi for maximum efficiency and production quality through the TFC membrane TDS removal process. Power standard outlet plug 110V / 60 Hz is required.

IMPORTANT NOTICES:

This Reverse Osmosis system contains replaceable treatment components critical for effective performance. It is the user's responsibility to, and the manufacturer strongly recommends that the user, periodically test the product water to verify the system is performing satisfactorily.

This system is acceptable for treatment of influent concentrations of no more than 27 mg/l nitrate and 3 mg/l nitrite in combination measured as N and is certified for nitrate/nitrite reduction only for water supplies with a pressure of 40 psig (280 kPa) or greater.

DO NOT USE WITH WATER THAT IS MICROBIOLOGICALLY UNSAFE OR OF UNKNOWN QUALITY, WITHOUT ADEQUATE DISINFECTION BEFORE OR AFTER THE SYSTEM. Systems certified for cyst reduction may be used on disinfected water that may contain filterable cysts.

PREPARATION

A. Major System Components

The following components comprise the Reverse Osmosis Drinking Water System. (Refer to Fig. 1, below for general system layout.)

1. A Reverse Osmosis Manifold assembly
2. Housings and Housing O-rings.
3. A Drinking Water Holding Tank.
4. A Dispensing Faucet.
5. A Feed Water Ball Valve.
6. A Drain Clamp.
7. Plastic Tubing and tube connectors.
8. A Reverse Osmosis Membrane sealed in a plastic bag.
9. A Sediment Pre-filter, shrink wrapped.
10. An activated Carbon Pre-filter, shrink wrapped.
11. An In-Line Activated Coconut Shell Carbon Post Filter.
12. Other items necessary for installation may include wood screws or machine screws and nuts for mounting the manifold, or concrete anchors for hanging on basement wall. Additional tubing or tube connectors. Plastic wire ties for organizing tubing.
13. Installation Kit


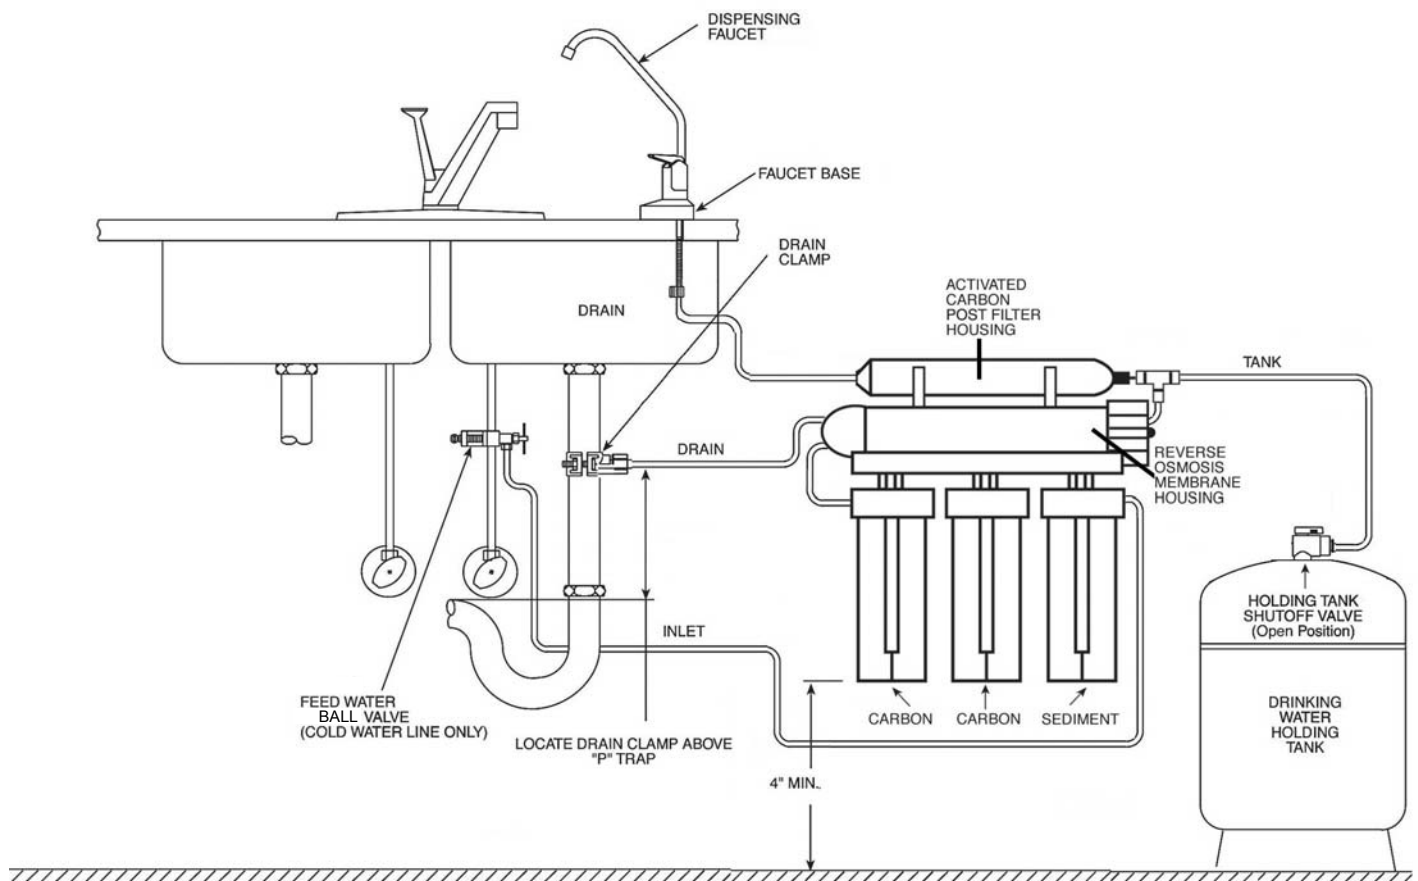


Figure 1

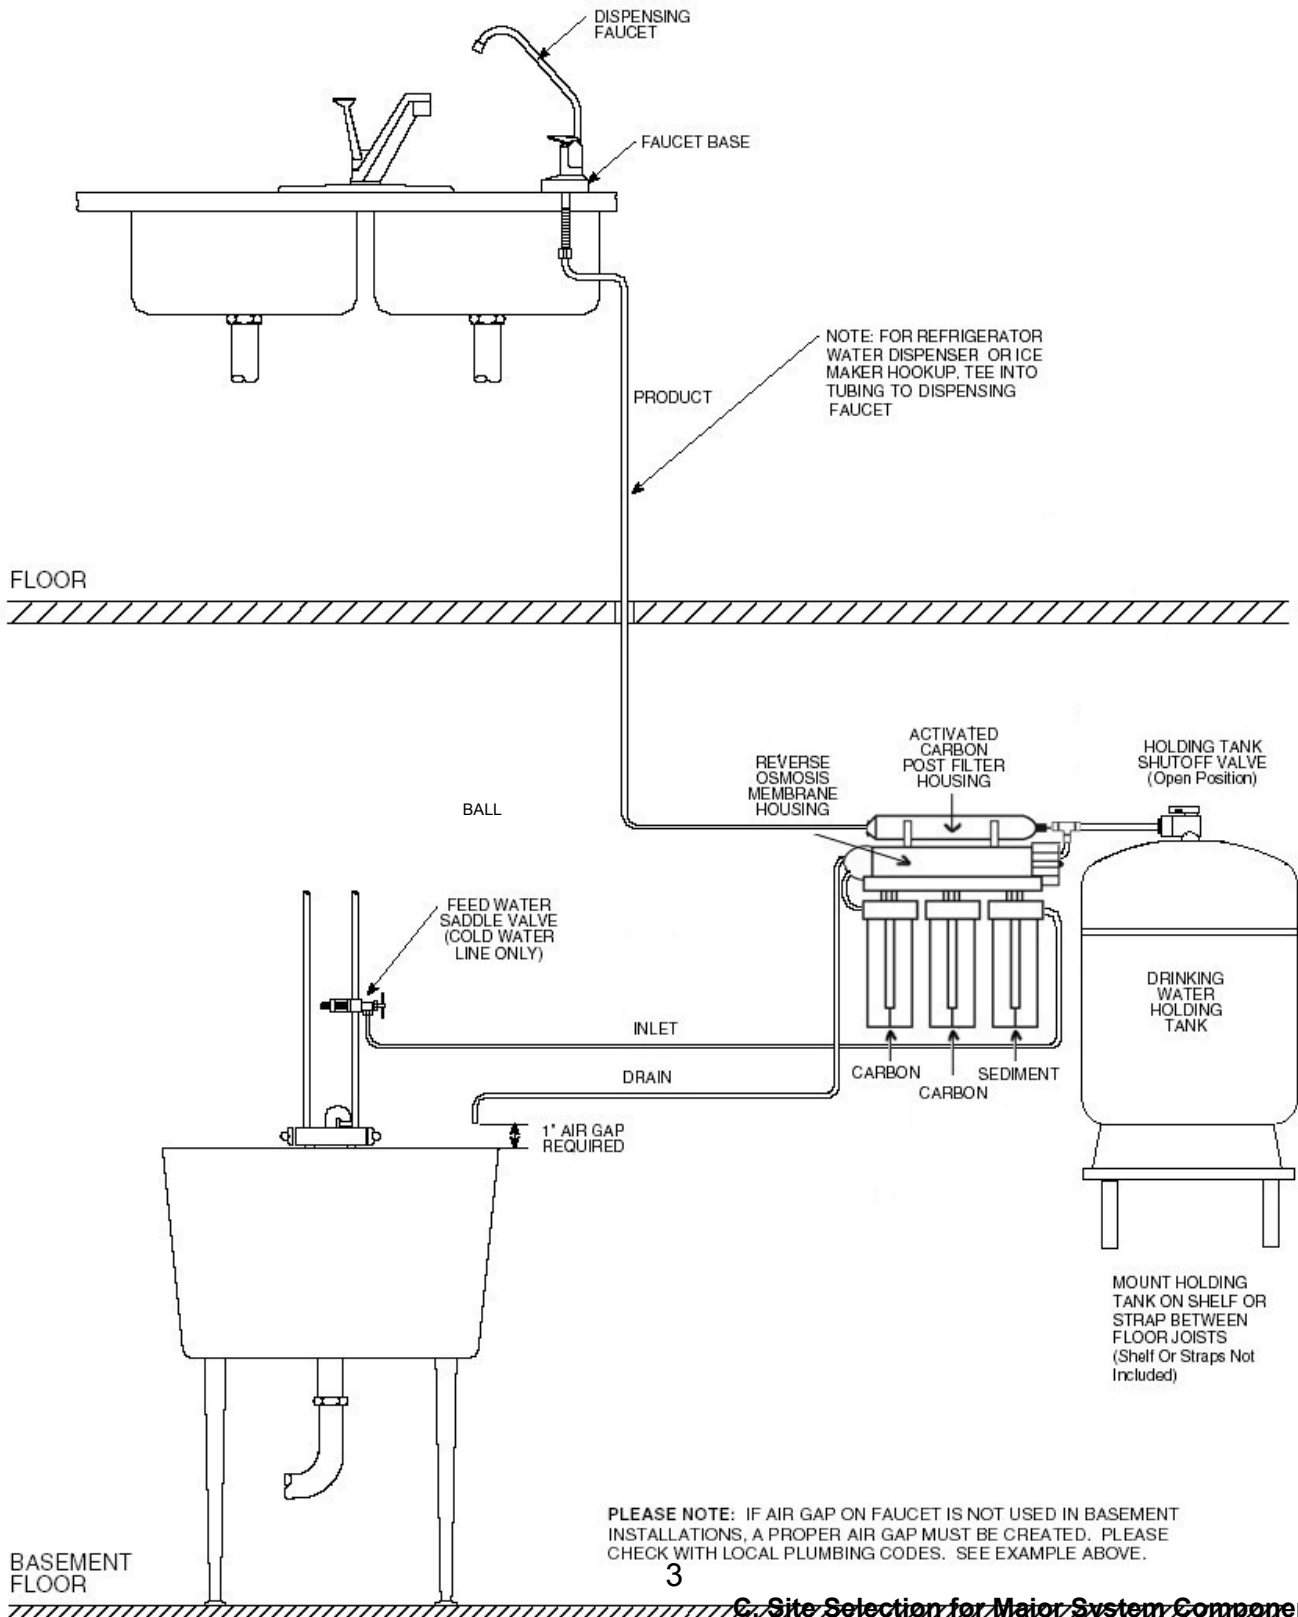

PLEASE NOTE: IF AIR GAP ON FAUCET IS NOT USED IN BASEMENT INSTALLATIONS, A PROPER AIR GAP MUST BE CREATED. PLEASE CHECK WITH LOCAL PLUMBING CODES. SEE EXAMPLE ABOVE.

B. Tools Recommended for Installation

The following tools will cover most of the installation sites encountered:

1. 3/8" variable speed electric drill.
2. Extension work light with outlet.
3. Safety glasses.
4. 11/4" Greenlee hole punch and 1/8" and 1/2" metal drill bits for pilot hole.
6. Center punch and hammer.
7. 11/4" wood bit.
8. Concrete drill bits.
9. Assorted wood and metal drill bits including 7/32" metal drill bit.
10. Phillips head and flat blade screwdrivers.
11. 1/2", 9/16" and 5/8" open end wrenches.
12. 10" Crescent wrench with jaws taped to hold faucet.
13. Basin wrench or 10" pipe wrench.
14. Teflon tape.
15. Wide masking tape or duct tape.
16. Plastic tubing cutter.
17. Extra plastic tubing.
18. Low range air pressure gauge.
19. Small bottle of liquid chlorine bleach.
20. Paper towels, wisk broom and assorted clean up materials.

C. Site Selection for Major System Components

The Reverse Osmosis System was designed to fit under a sink, however, because of space limitations or other reasons, the system's flexible design allows for other locations. When determining the location remember that access to a cold water tap line, the household drain, and ease of filter replacement are important considerations.

All components and tubing should be located in an area not exposed to freezing temperatures. If winter temperatures are severe, the area should be above the minimum temperature listed in Table B, page 2 for proper performance. Do not expose unit or tubing to direct sunlight.

- 1. Drinking Faucet** – The faucet should be placed near the sink where drinking water is normally obtained. Convenience of use (filling of water pitchers and glasses), and an open area beneath the faucet under the sink for attaching product and drain tubing are considerations. A 2" diameter flat surface is required above and below the installation site. The thickness of the mounting surface should not exceed 1 1/4". Watch for strengthening webbing on the underside of cast iron sinks.
- 2. Drinking Water Holding Tank** – The Holding Tank may be placed where it is convenient within 10 feet of the faucet; under the sink, in an adjacent cabinet are the best choices or in a basement within 20 feet of the faucet. If a longer run of tubing is required, the tubing should be the 3/8" diameter OD size to prevent a high pressure drop. Remember, these tanks can weigh up to 30 pounds when full of water; a firm, level area is required.
- 3. Reverse Osmosis Manifold Assembly** – The manifold can be installed on either the right or left side of the under-sink area or a cabinet. The right side is recommended because all the tubing will be to the back of the cabinet and out of the way. Installation in the basement is also an option; one location is near the laundry/utility sink where cold potable water and rain access are handy. The mounting location should allow adequate clearance and accessibility for cartridge changes.

4. Feed Water Connection – The Feed Water Ball Valve should be located as close to the manifold assembly as possible. USE A POTABLE COLD WATER SUPPLY ONLY. Softened water is preferred as it will extend the life of the Reverse Osmosis Membrane.

5. Drain Connection – The waste water must go to a drain connection with easy access.

Do NOT connect the system drain line to the dishwasher drain or near the garbage disposal.

INSTALLATION STEPS

All plumbing should be done in accordance with state and local plumbing codes.

In restricted under-sink areas, it may be easier to install the faucet first. Allow adequate tubing lengths for any final component position.

A. Faucet Installation

2a. Drilling a stainless steel sink:

- Center punch the hole to provide a starting point for the drill.
- Start with a smaller drill as a pilot, and then drill a 1/2" diameter hole to accept the bolt of a 1 1/4" Greenlee Hole Punch (1 1/4" chassis punch).
- Clean away any chips.
- Install the punch and tighten the nut to cut the hole.
- Deburr any sharp edges.

2b. Drilling a porcelain sink:

It is best to use a special 1 1/4" diameter cutter designed for porcelain. A carbide tipped masonry bit is a second choice.

- Place a piece of tape over the area to be drilled to help prevent chipping.
- Drill a pilot hole for the porcelain cutter. Use the pilot drill supplied with the kit or a carbide tipped drill.
- When drilling the 1 1/4" hole, drill slowly and carefully; the porcelain chips easily.
- After drilling, clean the area well. Iron filings, if left in place, can cause rust stains.

2c. Drilling a counter top:

NOTE: The counter top must be less than 1 1/4" thick. Treat ceramic tiles as porcelain until the tile is penetrated, then use the carbide tipped metal cutter.

Formica counter tops may be drilled with a good 1 1/4" wood bit, drilling a 3/32" pilot hole will help keep the bit going straight.

LONG REACH FAUCET

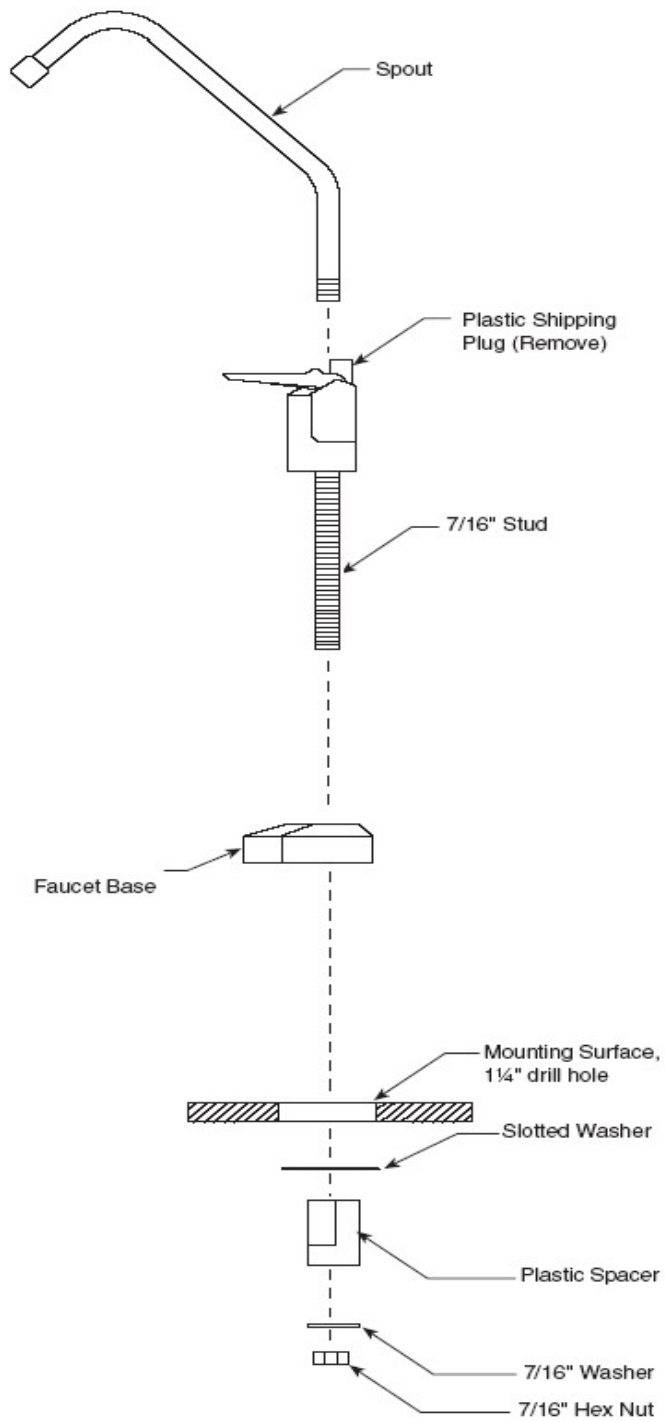


Figure 2A

B. Feed Water Ball Valve Installation

Decide on location. Do NOT connect to a hot water feed line. If you are not sure of the supply, run the hot water and feel the supply piping. Water over 100°F may cause permanent damage to the Reverse Osmosis Membrane. (Refer to Fig. 3 page 8.)

1. Shut off the water supply and drain the line.
2. To install the Feed Water Ball Valve:
 - You will require 1 – ½" MIP fitting (threaded on one end).
 - To begin, unscrew the copper pipe and fitting which is located directly under the sink.
 - Place some Teflon Tape on the threads of the copper pipe as well as the threads on the feed water ball valve.
 - Screw the copper pipe into the feed water ball valve.
 - Screw the pipe with the FIP fitting onto the opposite end of feed water ball valve.
 - Remove nut from the feed water ball valve.
 - Slide the nut onto the ¼" reverse osmosis tubing.
 - Place the ¼" tubing onto the exposed threads of the feed water ball valve.
 - Screw the nut onto the feed water ball valve.

3. With the Feed Water Ball Valve closed, open the sink faucet and the water supply and allow the water to run for a few minutes to flush any debris caused by the installation.
 - Close the faucet and check the Feed Water Ball Valve for leaks.
 - Once installation of Reverse Osmosis unit is completed open feed water ball valve to allow flow of water.

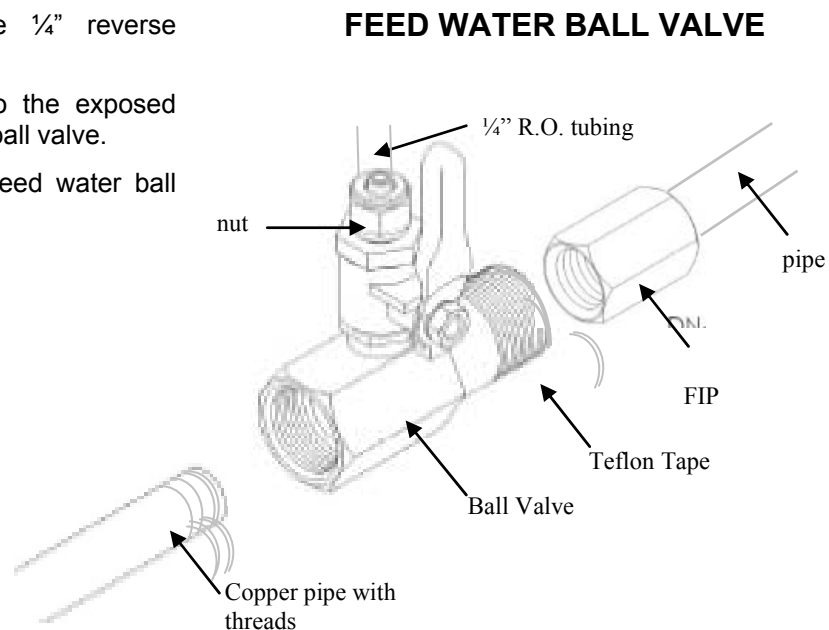


Figure 3

C. Drain Clamp Installation

Choose the drain outlet location.

The following are instructions for discharging in the sink drain pipe. (Refer to Fig. 1, page 3)

1. Position the Drain Clamp on the sink drain pipe above the drain trap. Allow room for drilling. Tighten securely.
2. Use a battery powered or properly grounded drill. Using the Clamp port as a drill guide, drill a 7/32" hole through the wall of the drain pipe. Do NOT penetrate the opposite side of the pipe.

3. Locate the 3/8" Black Drain Tubing connected to the Reverse Osmosis Unit. Route to the tubing to the Drain Clamp and trim to length.

NOTE: When cutting the polytubing make clean, square cuts, failing to do so could result in poor connections and possible leaks.

CAUTION: The lowest point of the line should be the point of connection to the Drain Clamp. There should be no sag in the line as this may cause excessive noise as the reject water is flowing to drain.

- Refer to Fig. 4, below. To connect the Drain Tubing, install the Compression Nut and the Brass Insert.
- Insert the tubing into the Drain Clamp and tighten the Compression Nut.

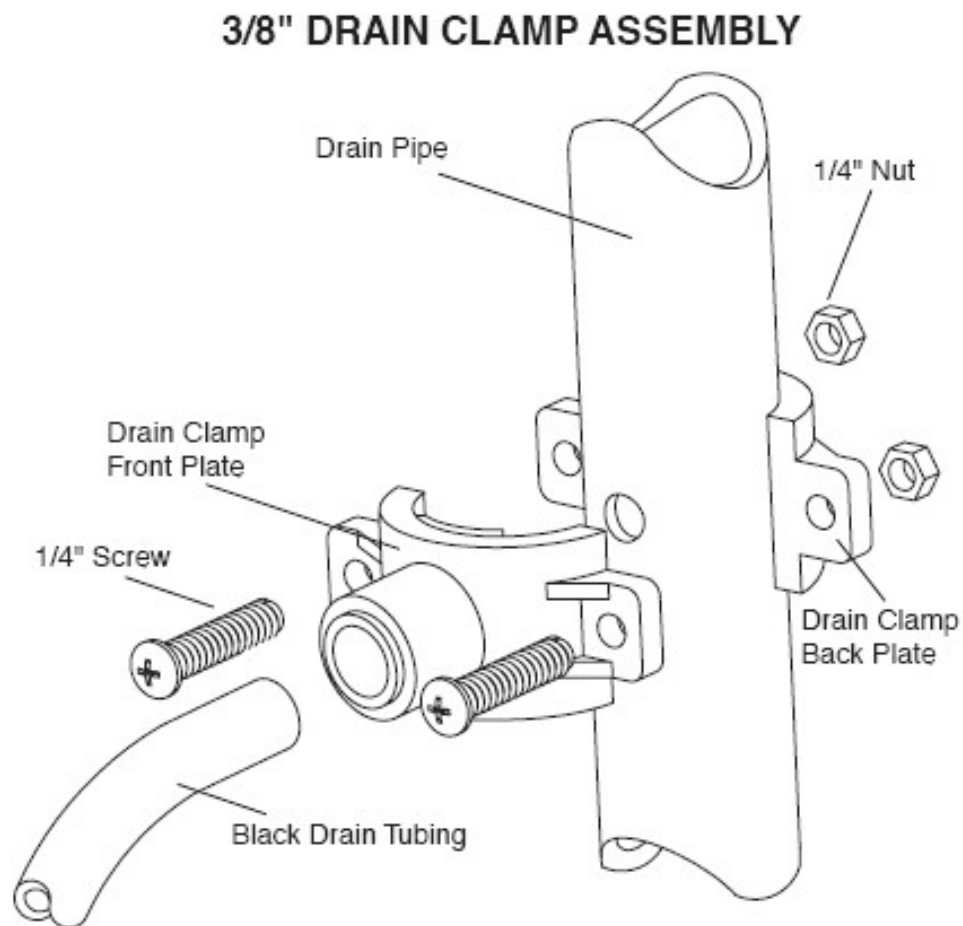


Figure 4

D. Position the Drinking Water Holding Tank and Make the Final Hose Connections

1. Check the tank pre-charge pressure. Make sure it is between 5 to 7 psig. If not, use a bicycle hand pump or other pump to bring the pressure up to the 5 to 7 psig range.
2. Pull the cap/plug off the top of the tank where the Tank Shut-Off should go. (Refer to Fig. 1, page 2)
3. Wrap Teflon tape three times around the 1/4" male outlet thread. Wrap in the direction of the threads (clockwise when looking down on the Holding Tank). The tape will act as a thread sealant. Screw on the Holding Tank Shut-Off Valve.
4. Locate the 3/8" Tubing. Firmly press one end into the Holding Tank Shut-Off Valve and the other end into the tee. (Refer to Fig. 1, page 2.) The fittings will grab the tubing and seal it in place. Make sure the tubing is pressed all the way in to create a pressure tight connection.

E. Start Up

At time of start up and each time the filters are changed the system should be sanitized.

1. Sanitizing the system and installing the Sediment Pre-filter. Use a drip pan to aid clean-up.

NOTE: The system should be sanitized BEFORE installing the Activated Carbon Pre-filter and the Reverse Osmosis Membrane.

- Use a good quality unscented liquid chlorine household bleach.
- Open the Dispensing Faucet by lifting the black handle and open the Holding Tank Shut-Off Valve (the handle should be parallel with the valve body).
- Remove the Housing on the side of the manifold labeled "SEDIMENT". Pour one capful of bleach (this is approximately 2 tsp. or 10 ml) into one of the white Housings. Unwrap Sediment Pre-filter and install pre-filter (press firmly into place). Engage and firmly tighten the Housing hand tight only.
- Remove all Housings add one capful of bleach in each. Engage and firmly tighten the Housings hand tight only.

- Slowly open the Feed Water Ball Valve (turning counter clockwise).
 - As soon as the water begins to come out of the Dispensing Faucet, close the Faucet.
 - Let stand for 15 minutes.
NOTE: During this time, check the system carefully for leaks.
 - At the end of 15 minutes, CLOSE the Feed Water Ball Valve and open the Dispensing Faucet.
 - Allow the Holding Tank to completely drain. Then remove the Activated Carbon Pre-filter Housing, empty, and install the activated Carbon Pre-filter. Firmly tighten the Housing hand tight only.
2. Installing the Reverse Osmosis Membrane:
 - Remove the Reverse Osmosis Membrane Housing, (the closest of the three to In/Out ports), and empty.
 - Insert the Membrane into the Membrane Housing. (The O-rings should be up toward the Membrane Housing cap.) Check the Housing O-ring for proper position in its groove, engage and firmly tighten the Housing hand tight only.
 3. Rinsing the system:
 - Slowly open the Feed Water Ball Valve fully counter clockwise.
 - The Holding Tank Valve should be open. The Reverse Osmosis System is now making water.
 - Do not use the first three full tanks of water.
CAUTION: The Reverse Osmosis Membrane is shipped with a preservative in it (0.5% sodium metabisulfite). This will be rinsed out with the first water produced. Allow the Holding Tank to fill (overnight) and discard the first three full tanks of production. When the Faucet is first opened, expect air and carbon fines (very fine black powder) from the In-Line Activated Carbon Post Filter to be rinsed out. This is normal for the first tank of water or after the In-line filter is changed.

OPERATION & MAINTENANCE

A. Normal Operation

1. Reverse Osmosis systems produce drinking water at relatively slow rates, it can take up to 3 hours to fill the Holding Tank. Normal operation is to let the Holding Tank fill with water and then draw water as is needed. When the pressure in the Holding Tank falls to a given pressure (as the water is being used) the Automatic Shut-Off Valve (ASO Valve) will start water production and the system will refill the Holding Tank. When the Holding Tank is full and no water is being used, the ASO Valve will automatically shut off the feed water to conserve water. The more water that is used (up to the capacity of the system) the better the Reverse Osmosis system will function. Other uses for the water are flowers, pets and rinsing glassware.

With each use it is recommended that you run the tap for at least 10 seconds prior to using water. This is especially important if the water tap has not been used daily. After periods of non-use, such as a week of vacation, it is better to empty the Holding Tank and allow the system to produce fresh water for use. If the system is not used for 3-4 weeks or longer, it is a good idea to re-sanitize the system and to change the pre-filter and post filters.

B. Changing Filters

THIS REVERSE OSMOSIS SYSTEM CONTAINS FILTERS WHICH MUST BE REPLACED AT REGULAR INTERVALS TO MAINTAIN PROPER PERFORMANCE. USE ONLY FACTORY APPROVED FILTERS.

All individuals should take adequate precautions when changing the filters, including wearing protective gloves, to avoid direct contact with the exhausted filters.

The recommended interval for changing the filters (not the Reverse Osmosis Membrane) is every six (6) months. Typical T.F.C. Membrane life expectancy is Five to ten years with Water Softener prior to Reverse Osmosis system. Local conditions may dictate more frequent changes.

Use a drip pan to catch any water that may spill when the Filter Housings are removed. Refer to Fig. 1, page 3 for component location.

1. Close the Feed Water Ball Valve by turning fully clockwise and open the Dispensing Faucet by lifting the handle. Allow the Holding Tank to empty.
2. Loosen and remove the Sediment Pre-filter and the Activated Carbon Pre-filter Housings. Discard the filters.
3. Wash the inside of the Housings using a mild detergent and a soft cloth. Do not use abrasive cleaners or pads. Thoroughly rinse all soap from the Housings before reassembly.
4. To sanitize the system and replace the filters:

NOTE: The system should be sanitized before installing the Activated Carbon Pre-filter.

- Use a good quality unscented liquid chlorine household bleach.
- Add one capful of bleach (this is 2 tsp. or 10 ml) to the Sediment Pre-filter Housing and install the Sediment Pre-filter. Check the Housing O-ring for proper position in its groove, engage and firmly tighten the Housing hand tight only.
- Add one capful of bleach to the Activated Carbon Pre-filter Housing. Install the Housing without the Activated Carbon Pre-filter.
- The Dispensing Faucet should be open, slowly open the Feed Water Ball Valve.
- As soon as the water begins to drip out of the Dispensing Faucet, close the Faucet.
- Let the system stand for 15 minutes.
- At the end of 15 minutes, in the following order, close the Feed Water Ball Valve, close the Holding Tank Valve and open the Dispensing Faucet to release the pressure.
- Remove the Activated Carbon Pre-filter Housing and empty. Remove the wrapping and install the Activated Carbon Pre-filter. Firmly tighten the Housing hand tight only.
- Disconnect the tubing that runs from the Holding Tank to the Tee (see Fig. 1, page 3). Put 50 drops of bleach (this is ½ tsp. or

3 ml) into the tubing and reconnect it to the Tee.

NOTE: Now is the convenient time to change the In-Line Activated Carbon Post Filter.

- Slowly open the Feed Water Ball Valve. When water begins dripping out of the Dispensing Faucet, in the following order, close the Faucet and then open the Holding Tank Valve.
- Do not open the Faucet for at least 5 hours.
- Discard the first three full tanks of water produced, they will contain chlorine.

C. Changing the In-Line Activated Carbon Post Filter

1. Close the Feed Water Ball Valve by turning fully clockwise.
2. Close the Holding Tank Valve and then open the Dispensing Faucet to release the pressure.
3. Remove the In-Line Activated Carbon Post Filter. Disconnect the used Post Filter by pressing in the connector's collar and at the same time pulling the tube out of the fitting. Unscrew the fittings on the In-Line, re-Teflon tape them and install them on the new Post Filter. Do not over tighten the fittings.
4. Firmly reconnect the polytubes to the new Post Filter. (Refer to Fig. 5 below.)

IN-LINE COCONUT SHELL CARBON POST FILTER ASSEMBLY

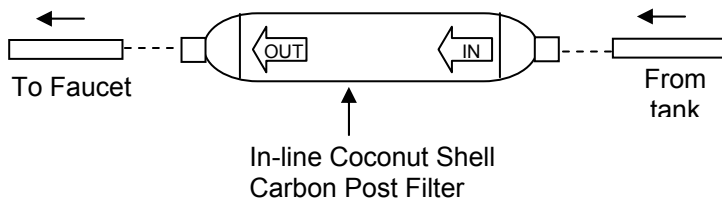


Figure 5

5. Slowly open the Feed Water Ball Valve.
6. When water begins dripping out of the Faucet, in the following order, close the Faucet and open the Holding Tank Valve. When the Faucet is first opened, expect air and carbon fines (very fine black powder), from the new Post Filter to be rinsed out. This is normal for the first tank of water.

TECHNICAL DATA

A. Water Quality

Water quality is normally measured with a special meter that measures the water's ability to conduct electricity. The more dissolved solids in the water, the higher the conductivity. The results are usually reported in **Parts per Million (ppm)** or **Milligrams per Liter (mg/l)** of **Total Dissolved Solids (TDS)**. (Although technically they are not exactly equal, in most discussions ppm = mg/l).

Reverse Osmosis Membranes are rated by the amount of dissolved solids that are rejected. This rating is a ratio of the TDS in the feed water to the TDS in the product water and is reported as **Percent Rejection**. If the feed water contained 100 ppm of TDS and the product water contained 10 ppm of TDS, 90 ppm have been rejected and the reject ration is 90%.

$$\text{Percent Rejection} = \frac{\text{Feed TDS} - \text{Product TDS}}{\text{Feed TDS}}$$

EXAMPLE: Feed water is 500 ppm TDS and the product water is 75 ppm TDS.

$$\text{Percent Rejection} = \frac{500 - 75}{500} \times 100\%$$

$$\text{Percent Rejection} = 0.85 \times 100\% \text{ or } 85\%$$

TROUBLE SHOOTING GUIDE


Problem	Possible Cause	Solution
Low quantity of Product Water from Holding Tank	Feed Water Ball Valve is plugged or closed.	Open Valve or unclog.
	Clogged Sediment Pre-filter or Activated Carbon Pre-filter.	Replace filters.
	Low water pressure.	Feed Water pressure must be above 40 psig.
	Reverse Osmosis. Membrane is fouled.	See Feed Water operating limits. Correct cause of fouling, replace Membrane.
	Plugged In-Line Activated Carbon Post Filter.	Replace Post Filter.
	Air pre-charge pressure in Holding Tank is too high.	Empty water from Holding Tank, and with the faucet open, adjust air pressure to 5 – 7 psig (35–48 kPa) range.
	Air pre-charge is too low	
	Air Bladder in the Holding Tank is ruptured.	Replace tank.
	Holding Tank Valve is closed.	Open Valve.
	No drain flow, the Drain Restrictor is plugged.	Clear or replace Drain Restrictor.
	The Check Valve is stuck.	Free check.
	The ASO Valve is malfunctioning.	Replace ASO Valve components.
Low pressure at the Dispensing Faucet	In-Line Activated Carbon Post Filter is plugged.	Replace Post Filter.
	Air pre-charge in the Holding Tank is too low.	Empty water from Holding Tank and with the faucet open, adjust air pressure to 5 – 7 psig (35-48 kPa) range.
		Check for leakage at the Air Valve Stem.
	Holding Tank Valve is partially closed.	Open Valve
	The dispensing Faucet is out of adjustment or faulty.	Repair or replace Dispensing Faucet.
	Heavy water use, Holding Tank is depleted.	Allow Holding Tank to refill (adding a second Holding Tank will increase storage capacity).
	Low Water Production.	See Low Quantity of Product Water from Holding Tank section above.
High Total Dissolved Solids (TDS) in the Product Water	Clogged Sediment Pre-filter or Activated Carbon Pre-filter.	Replace Filters.
	Low Water Pressure.	Feed Water Pressure must be above 40 psig.
		Check Feed Water Ball Valve.
	Reverse Osmosis Membrane O-ring is crimped.	Check O-ring.
	Reverse Osmosis Membrane brine seal is not sealing up into the manifold head.	Check the brine seal.
	Reverse Osmosis Membrane is expended.	If Membrane life is unusually short, find and correct the problem. Replace Membrane.

Problem	Possible Cause	Solution
High Total Dissolved Solids (TDS) in the Product Water (continued)	The Product Water and Drain Water lines are reversed.	Correct plumbing.
	No drain flow, Drain Restrictor is clogged.	Clear or replace Drain Restrictor.
	The ASO Valve is not closing.	Repair or replace the ASO Valve Components.
	New In-Line or Activated Carbon Pre-filter not rinsed completely.	Flush with several full tanks of Product Water.
	The Feed Water TDS has increased.	An increase in Feed Water TDS will give a corresponding increase in Product Water TDS.
Tastes and odors in the Product Water	The In-Line or Activated Carbon Pre-filter is exhausted.	Replace Filters.
	There is foreign matter in the Holding Tank.	Clean, flush and sanitize the system. Replace the filters.
	The Product Water and Drain Water lines are reversed.	Correct plumbing.
	Dissolved gassed in the Feed Water.	Pre-treat Feed Water to remove dissolved gasses.
	Increase in Product Water TDS.	See high TDS in the Product Water section.
Drain Water overflows at the Air Gap Faucet	Drain tubing is clogged.	Clear tubing.
	Drain clamp hole is misaligned.	Align with hole in the drain pipe.
	Excessive drain flow rate.	Replace Drain Restrictor.
Faucet leaks or drips	Leaks from spout.	Adjust Faucet by turning the tee bar just below the handle to provide a small amount of free play in handle when shut off.
		O-rings are bad, repair or replace faucet.
	Leaks from base of the delivery tube.	O-ring is bad, replace O-ring.
	Leaks from beneath the handle.	O-rings are bad. Repair or replace the faucet.
Fitting leaks in general	Close the Feed Water Ball Valve and relieve pressure before disconnecting any tubing or replacing any fitting. Before replacing a fitting, re-cut the tubing and re-insert into the fitting to see if that solves the leak. If pipe threads are leaking, remove and re-tape with Teflon tape.	


Instructions for Installation and Maintenance of your R/O System

INSTALLATION DIAGRAM


1 Input water:

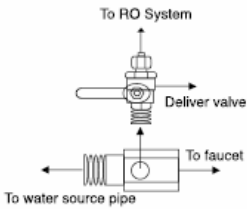


2 Install water tank:

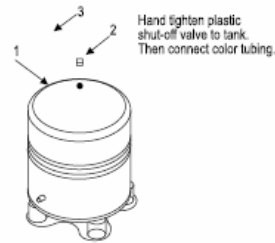


3 Install European ceramic faucet:

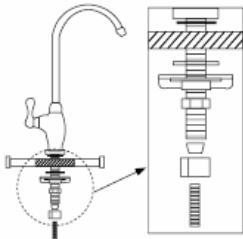

4 Install drain saddle:

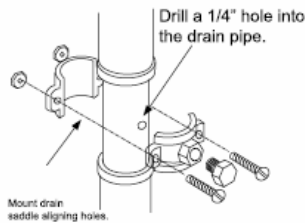

5 Assemble membrane:

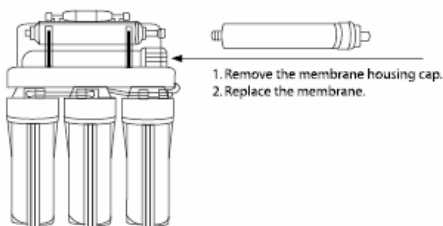


HOW TO CHANGE FILTERS


1 Prepare a housing wrench.




2 Turn off water source.

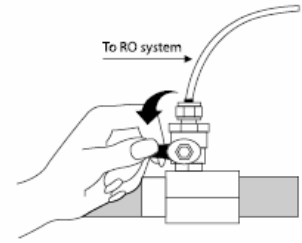

3 Switch off water tank.

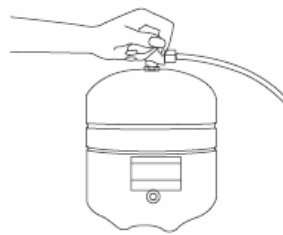

4 Open housings clockwise with a wrench.

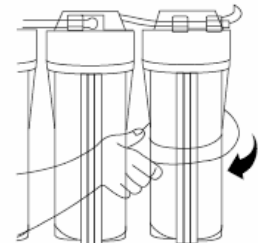

5 Put the replacement filters in the housings and double o'ring.



6 Drain out 1 Gallon of water to purify replacement filters.

